









User Manual for G650/X3000 Plus Folding Electric Bike

Bike Computer Operation:



1. **Turn on/ Turn off bike computer:** Press  for 3 seconds to turn or turn off the bike computer;
2. **Turn on/ Turn off bike front light:** Press  to turn on or turn off front light.
3. **Active walk mode :** After turning on the bike computer and press  for 3 seconds to active the walk mode.
4. **Increase/ Decrease PAS /Throttle Power Delivery Level:** After turning on the bike computer and press  to increase the PAS Level and Press  to decrease PAS level.
5. **Bike Horn:** Press  to turn on or turn off the horn .
6. **Speed Unit Setting (How to change the Speed Unit to Miles or KMS ?)**

After turning on the bike computer and press  and  together for 3 seconds to enter setting mode,

then press  to switch P level setting from P01 to P02 ;

change the P02 code from 00000 to 00001 by press  or , the speed unit will be in MPH or KMP;

Brakes and Throttle Operation:



A: Shimano 7 Speeds Gears Lever;

B: Front Brake Lever

C: Twist Throttle



A: Rear Brake Lever

B: Horn/Front Light Button

C: Bike Computer and Control Unit

Battery Removing and Charging:

Charge Hours: 5-7 Hours;

Charger Light Red: Charging

Charger Light Green: Full Charge




There are **TWO** ways to charge the battery:

A: Charge battery directly in the bike frame;

B: Take out battery out from bike frame and charge battery separately;


In order to do so, follow below steps take out the battery from bike frame:

1) Open the folding frame locker . Find the latch on the folding frame locker.

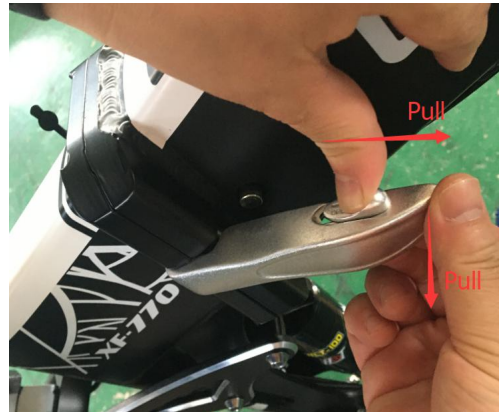


Press and pull the latch at forward by one hand and pull out the locker by another hand.

2) Find the battery key at the under face of bike frame and make twice clockwise turns;

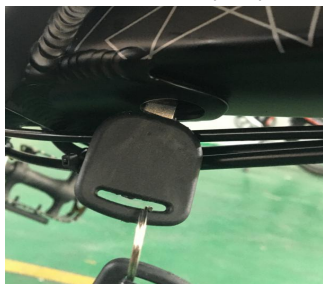

When battery key cylinder pulls back fully and then **take off the key**

from bike frame and battery.

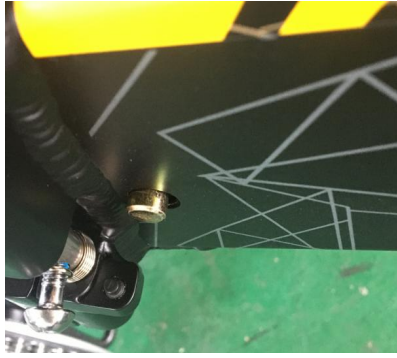

3) Fold bike frame and use the battery finger hook to take out the battery;



Pedals Folding Operation:



Push and press pedal inward and then fold the pedal