









## User Manual for XF770/XF690 Plus Folding Electric Bike


### Bike Computer Operation:



1. **Turn on/ Turn off bike computer:** Press  for 3 seconds to turn or turn off the bike computer;
2. **Turn on/ Turn off bike front light:** Press  to turn on or turn off front light.
3. **Active walk mode :** After turning on the bike computer and press  for 3 seconds to active the walk mode.
4. **Increase/ Decrease PAS /Throttle Power Delivery Level:** After turning on the bike computer and press  to increase the PAS Level and Press  to decrease PAS level.
5. **Bike Horn:** Press  to turn on or turn off the horn .

### 6. Speed Unit Setting ( How to change the Speed Unit to Miles or KMS ?)

After turning on the bike computer and press  and  together for 3 seconds to enter setting mode,

then press  to switch P level setting from P01 to P02 ;

change the P02 code from 00000 to 00001 by press  or , the speed unit will be in MPH or KMP;


### Brakes and Throttle Operation:



A: Shimano 7/9 Speeds Rear Gears Lever;

B: Front Brake Lever

C: Twist Throttle

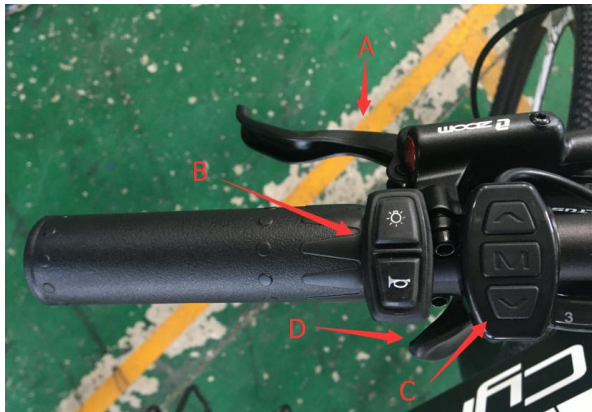

A: Rear Brake Lever

B: Horn/Front Light Button

C: Bike Computer and Control Unit

D: Shimano 3 Speeds Front Gears Lever (XF770);

### Battery Removing and Charging:

**Charge Hours:** 5-7 Hours;

**Charger Light Red:** Charging

**Charger Light Green:** Full Charge




There are **TWO** ways to charge the battery:

A: Charge battery directly in the bike frame;

B: Take out battery out from bike frame and charge battery separately;

In order to do so, follow below steps take out the battery from bike frame:

**1) Open the folding frame locker . Find the latch on the folding frame locker.**

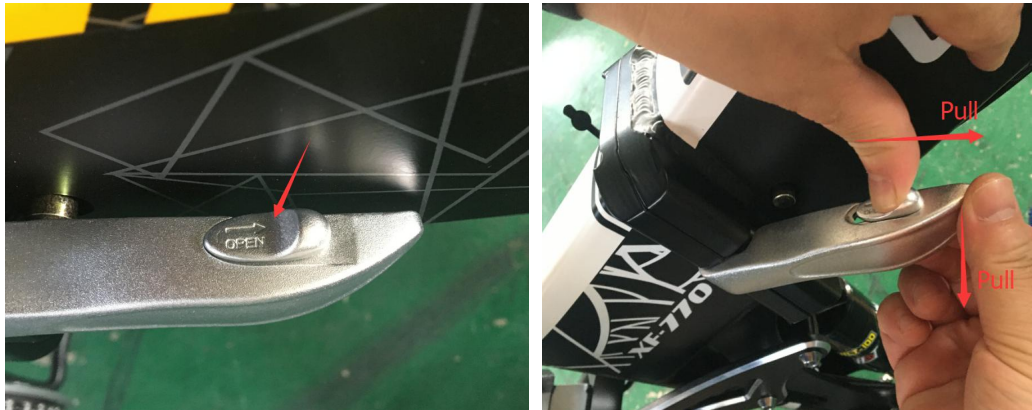


Press and pull the latch at forward by one hand and pull out the locker by another hand.

**2) Find the battery key at the under face of bike frame and make twice clockwise turns;**



When battery key cylinder pulls back fully and then **take off the key** from bike frame and battery.

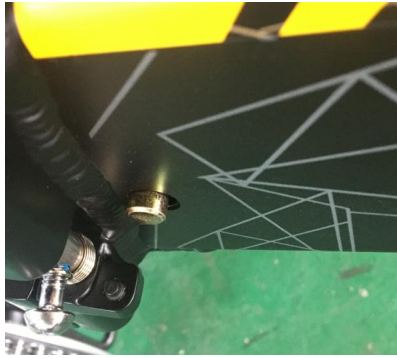

3) Fold bike frame and use the battery finger hook to take out the battery;



### Pedals Installment:



WR/R is for Right Crank: WL/L is for Left Crank;



Slightly hands in the Right pedal into Right crank arm first and then use # 15 wrench to fasten pedals firmly in clockwise direction. Do the same with Left pedal on Left crank arm too in anti-clockwise direction.